



# TRAVELQ™

PORTABLE GAS GRILL

## OWNER'S MANUAL

MODEL NO.: TQ3225

### FOR OUTDOOR USE ONLY

Read this manual carefully before assembling, using or servicing this gas grill.

## MANUEL D'INSTRUCTIONS

N° DE MODÈLE : TQ3225

### POUR USAGE EXTÉRIEUR SEULEMENT

Lisez ce manuel attentivement avant d'assembler, d'utiliser ou d'entretenir ce grill à gaz.

## MANUAL DEL PROPIETARIO

N° DE MODELO: TQ3225

### SÓLO PARA USO EXTERIOR

Lea detenidamente este manual antes de proceder al montaje, uso o mantenimiento de esta parrilla a gas.



0063/09

FOR EUROPEAN USE ONLY • POUR USAGE EN EUROPE SEULEMENT • SÓLO PARA USO EN EUROPA



TRAVELQ™  
PORTABLE GAS GRILL

#### Important • Important • Importante :

CONSUMER / USER • CONSOMMATEUR / UTILISATEUR • CONSUMIDOR / USUARIO :

This instruction manual contains important information necessary for the proper assembly and safe use of the appliance. Read and follow all warnings and instructions before assembling and using the appliance. • Ce manuel d'instructions contient des renseignements importants pour assembler et utiliser ce grill en toute sécurité. Lisez et suivez attentivement toutes les instructions et les avertissements avant d'assembler ce grill. • Este manual de instrucciones contiene información importante necesaria para el montaje adecuado y uso seguro del dispositivo. Lea y siga todas las advertencias e instrucciones antes de proceder al montaje y uso del dispositivo.

Keep this manual for future reference • Conservez ce manuel pour consultation ultérieure • Conserve este manual a modo de referencia futura



# TRAVELQ™

PORTABLE GAS GRILL

## BENUTZERHANDBUCH

MODEL-NR.: TQ3225

### NUR FÜR DEN GEBRAUCH IM FREIEN

Lesen Sie dieses Handbuch vollständig durch, bevor Sie den Gasgrill montieren, in Betrieb nehmen oder warten.

## MANUALE D'USO

MODELLO N.: TQ3225

### DA UTILIZZARE UNICAMENTE ALL'APERTO

Leggere attentamente il seguente manuale prima di assemblare, utilizzare o effettuare lavori di manutenzione su questo grill a gas.

## GEBRUIKSAANWIJZING

MODEL NUMMER: TQ3225

### ALEEN VOOR GEBRUIK BUITENSHUIS

Lees deze gebruiksaanwijzing zorgvuldig door, vóór montage, gebruik of onderhoud van deze gasgrill.



0063/09

NUR ZUR VERWENDUNG IN EUROPA • UNICAMENTE PER UN UTILIZZO IN EUROPA • ALLEEN VOOR EUROPEES GEBRUIK



TRAVELQ™  
PORTABLE GAS GRILL

#### Wichtig • Importante • Belangrijk :

#### VERBRAUCHER / BENUTZER • CONSUMATORE / UTILIZZATORE • CONSUMENT/GEBRUIKER :

Dieses Handbuch enthält wichtige Informationen für die korrekte Montage und sichere Verwendung des Geräts. Lesen Sie alle Warnungen und Anweisungen sorgfältig durch, bevor Sie das Gerät montieren und in Betrieb nehmen. • Questo manuale di istruzioni contiene avvertimenti importanti per l'assemblaggio e l'utilizzo sicuro del grill. Leggere e seguire con attenzione tutte le istruzioni e gli avvertimenti prima di procedere all'assemblaggio del grill. • Deze gebruiksaanwijzing bevat belangrijke informatie voor correcte montage en veilig gebruik van dit toestel. Lees en volg alle waarschuwingen en instructies op alvorens dit toestel te monteren en te gebruiken.

Bewahren Sie dieses Handbuch zur weiteren Referenz auf • Conservare questo manuale per riferimento futuro  
Bewaar deze gebruiksaanwijzing om later na te kunnen slaan

Contents:

•General Safety Information	—————P1	•Cleaning and Maintenance	—————P6
•Operating Instructions	—————P3	•Storage	—————P8
•Gas Instructions	—————P3	•Troubleshooting	—————P8
•Leak Check	—————P5	•Parts List	—————P9
•Cooking	—————P6	•Warranty	—————P10

General Safety Information

⚠ DANGER

If you smell gas:

1. Shut off gas to the appliance.
2. Extinguish any open flame.
3. Open lid.
4. If odor continues, keep away from the appliance and immediately call your fire department.

Failure to follow these instructions could result in fire or explosion, which could cause property damage, personal injury or death.

⚠ DANGER

- 1.Never operate this appliance unattended.
- 2.Never operate this appliance within 24 inches(610m) of any structure, combustible material or other gas cylinder.
- 3.Never operate this appliance within 24 inches(610m) of any flammable liquid.
- 4.Do not fill cooking vessel beyond maximum fill line.
- 5.Never allow oil or grease to get hotter than 200°C / 400°F.  
If the temperature exceeds 200°C / 400°F, or if oil begins to smoke, immediately turn the burner or gas supply OFF.
- 6.Heated liquids remain at scalding temperatures long after the cooking process. Never touch cooking appliance until liquids have cooled to 45°C / 113°F or less.
- 7.If a fire should occur, keep away from the appliance and immediately call your fire department.  
Do not attempt to extinguish an oil or grease fire with water.

Failure to follow these instructions could result in fire, explosion or burn hazard, which could cause property damage, personal injury or death.

⚠ DANGER

Failure to follow these instructions could result in property damage, personal injury or death.

Clean the Catch Pan the Base Pan before each use. Excess grease and debris inside the unit will cause a grease fire within the grill.

⚠ DANGER

- The use of alcohol, prescription or non-prescription drugs may impair the consumer's ability to properly assemble or safely operate the appliance.
- When cooking with oil or grease, have a type BC or ABC fire extinguisher readily available. In the event of an oil or grease fire do not attempt to extinguish with water. Immediately call the fire department. A Type BC or ABC fire extinguisher may, in some circumstances contain the fire.
- In the event of rain, snow, hail, sleet or other forms of precipitation while cooking with oil or grease, cover the cooking vessel immediately and turn off the appliance burners and gas supply.  
Do not attempt to move the appliance or cooking vessel.
- When cooking, the appliance fryer/boiler must be on a level, stable noncombustible surface in an area clear of combustible material. An asphalt surface (blacktop) may not be acceptable for this purpose.
- Do not leave the appliance unattended.  
Keep children and pets away from the appliance at all times.
- Do not place empty cooking vessel on the appliance while in operation. Use caution when placing anything in cooking vessel while the appliance is in operation.
- Do not move the appliance when in use. Allow the cooking vessel to cool to 45°C / 113°F or less before moving or storing.
- This appliance is not intended for and should never be used as a heater.

The following symbols shown below are used extensively throughout these instructions. Always heed these precautions, as they are essential when using any mechanical or propane fueled equipment.

⚠ DANGER

DANGER indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

## ⚠ WARNING

WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

## ⚠ CAUTION

CAUTION indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate personal injury, or property damage.

## ⚠ WARNING

- ▲ Improper assembly may be dangerous. Please carefully follow the assembly instructions in this manual.
- ▲ Do not store a spare or disconnected propane cylinder under or near the Travel Q.
- ▲ Do not operate the Travel Q if there is a gas leak present.
- ▲ Do not use a flame to check for gas leaks.
- ▲ Combustible materials should never be within 24 inches(610mm) of the top, bottom, back or sides of your Travel Q.
- ▲ Do not use charcoal or lava rock in your Travel Q.
- ▲ The Travel Q should never be used by children. Accessible parts of the grill may be very hot. Keep children away while it is in use.
- ▲ You should exercise reasonable care when operating your Travel Q. It will be hot during cooking or cleaning and should never be left unattended, or moved while in operation.
- ▲ Should the burner go out while in operation, turn the gas valve off. Open the lid and wait 5 minutes before attempting to relight, using the lighting instructions.
- ▲ Never lean over an open grill or place hands or fingers on the front edge of the cooking box.
- ▲ Do not enlarge valve orifice or burner ports when cleaning the valve or burner.
- ▲ Should a grease fire occur, turn off the burner and leave lid closed until fire is out.
- ▲ The Travel Q should be thoroughly cleaned on a regular basis.
- ▲ After a period of storage, and/or nonuse, the Travel Q should be checked for gas leaks and burner obstructions before use. See instructions in this manual for correct procedures. Propane gas is not natural gas. The conversion or attempted use of natural gas in a propane unit or propane gas in a natural gas unit is dangerous and will void your warranty.

- ▲ Do not attempt to disconnect any gas fitting while the Travel Q is in operation.
- ▲ Use heat-resistant BBQ mitts or gloves when operating the Travel Q.
- ▲ Keep any electrical supply cord away from any heated surfaces.
- ▲ Combustion byproducts produced when using this product contain chemicals known to the state of California to cause cancer, birth defects, or other reproductive harm.
- ▲ Do not use the Travel Q unless all parts are in place. The unit must be properly assembled according to the instructions outlined in the "Cleaning and Maintenance" section of the Owner's Guide.
- ▲ Do not use the Travel Q in a vehicle trunk, station wagon, mini-van, sport utility vehicle (SUV), recreational vehicle (RV), or Boat.
- ▲ Do not attempt to disconnect the gas regulator or any gas fitting while the grill is in operation.
- ▲ This appliance is not intended for commercial use.

## ⚠ WARNING

Do not try to light this appliance without reading the "Lighting Instructions" section of this manual.

## ⚠ WARNING

Follow all leak-check procedures carefully in this manual prior to barbecue operation. Do this even if the Travel Q was dealer-assembled.

**Travel Q IS DESIGNED FOR OUTDOOR USE ONLY.**

## NOTICE


These instructions must be left with the owner and the owner should keep them for future use.



## Operating Instructions


### Getting Started

Inspect all packing and remove all parts (Fig.1)  
Take out the storage case (Fig.1)  
Stretch out the folding legs (Fig.2)  
Release the lock switch then open the lid (Fig.3)

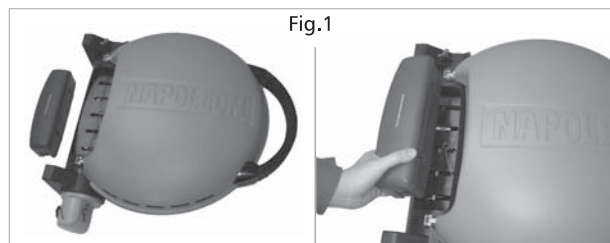

## Gas Instructions


### Attach Fuel / Hose Connection

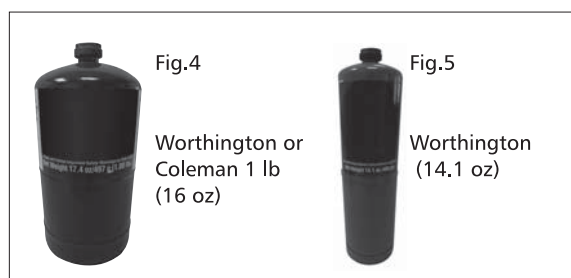


Travel Q has equipped with built-in regulator for your convenience. Please follow the below instructions for various applications:

A. For portable canisters (Worthington or Coleman 1lb (Fig.4, Fig.5), Primus-Power Gas(Fig.8), and Iwatani Butane Canister(Fig.13):

1, Worthington or Coleman 1lb(16oz, 497gm, Fig. 4) or 14.1 oz (400gm, Fig. 5) canisters can easily adapt right into gas inlet of Travel Q.

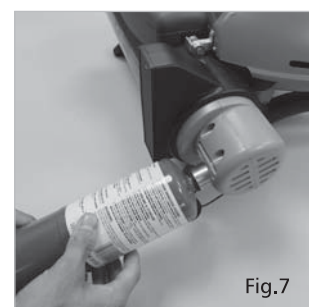

2, Primus-Power Gas (645gm, 390gm, and 198gm, Fig.8) canister need O-Daptor Type E (Fig. 9)(shipped with Travel Q 3225, optional for Travel Q 2225) to fit into Travel Q gas inlet.

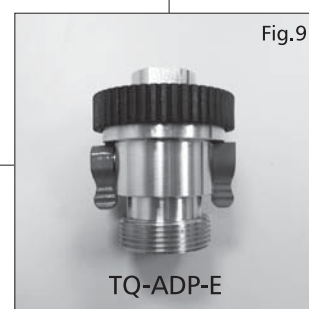

Apply TQ-ADP-E into Travel Q gas inlet by screw clockwise until it is tight.(Fig. 10)

Use liquid propane canister in Primus thread type with capacity 198gm (7 oz), 390gm (13.7 oz) or 645gm (22.7oz) Fig. 8.

3, Iwatani Butane Canister need TQ-ADP-A (optional, Fig.12) to fit into Travel Q gas inlet.



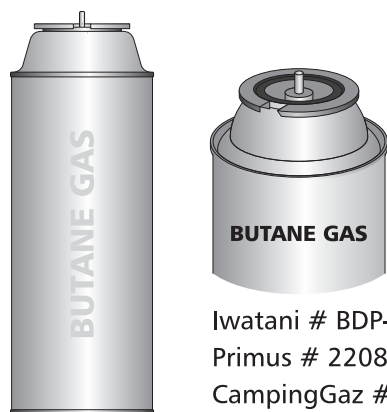


Fig.13

Iwatani # BDP-250A  
Primus # 220893  
CampingGaz # CP 250



Fig.14

Apply TQ-ADP-A (Fig.12) into Travel Q gas inlet by screw clockwise until it is tight (Fig. 14).

B.For floor type gas tank:

Apply extension hose with connector into Travel Q gas inlet by screw clockwise until it is tight. (Fig. 16)

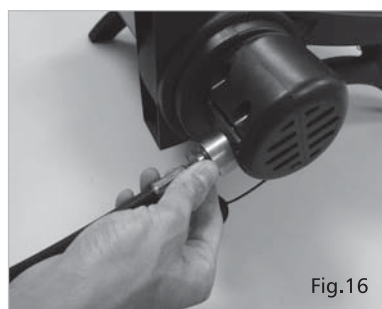


Fig.16



Ground cylinder connection

## ⚠ WARNING

Do not use a wrench to tighten the connection. Using a wrench could damage the regulator coupling and could cause a leak.

## To Light

- 1) Open the lid.
- 2) Make sure the control knob is turned OFF.  
(Push control knob in and turn clockwise to ensure that it is in the OFF position.)
- 3) Push burner control knob down and turn to **HI / START** (⚡) (Fig.18)
- 4) Push the red ignition button several times, so it clicks each time (Fig.19)
- 5) Check that the burner is lit by looking down through the cooking grid. You should see a flame.
6. Turn OFF the gas supply at the gas container after use.

## ⚠ DANGER

Do not lean over the open grill. Keep your face and body at least one foot away from the grill when lighting the grill.

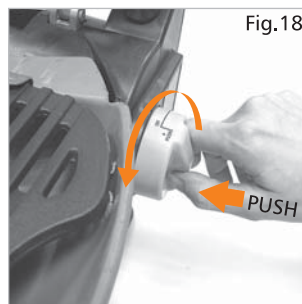


Fig.18

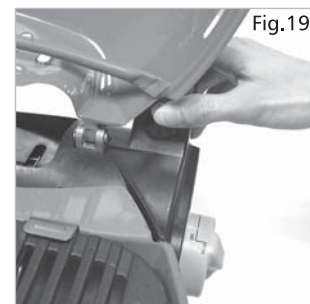


Fig.19





## ⚠ DANGER

If the burner does not light, turn the burner control knob to OFF and wait 5 minutes to let the gas clear before you try again.

## **⚠ DANGER**

Failure to open the lid while igniting the grill's burner, or not waiting 5 minutes to allow the gas to clear if the grill does not light, may result in an explosive flame-up which can cause serious bodily injury or death.

- 6) The burner may be match lighted if there is no ignition.
  - (a) First, remove the match extension stick from the storage compartment (Fig.20)
  - (b) Push the match into the clip of extension stick (Fig.21)
  - (c) Hold extension stick close to Burner and turn control knob slowly (Fig.22)
  - (d) Adjust flame to desired heat level.(Fig.23)

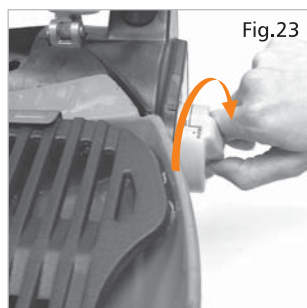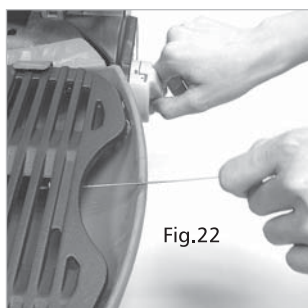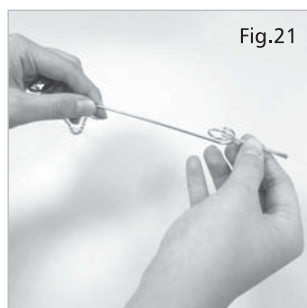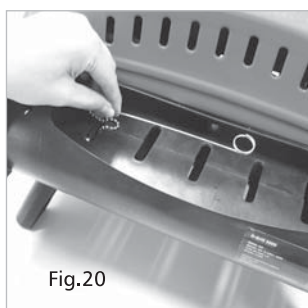


## **To Extinguish**

Push in and turn burner control knob clockwise to the OFF position (Fig.23)

## **Leak Check**

Check:

- 1-1) Built-in Regulator to TQ-ADP-E or type A (Fig.12) connection. (Fig.24)
- 1-2) Gas canister to TQ-ADP-E or TQ-ADP-A connection. (Fig.25)

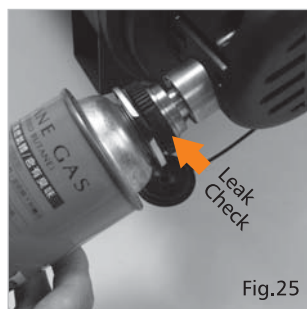

1-3) Extension hose connector (for ground type gas cylinder) to Travel Q built-in regulator connection. This is optional to Travel Q 3225 and 2225 (Fig.26).

## **⚠ DANGER**

If there is a leak at connection turn OFF the gas. DO NOT OPERATE THE GRILL. Contact the Customer Service Representative in your area.

When leak checks are complete, turn gas supply OFF at the source and rinse connections with water.

## **⚠ DANGER**

Do not use an open flame to check for gas leak. Be sure there are no sparks or open flames in the area while you check for leaks. Sparks or flames will result in a fire or explosion which can cause serious bodily injury or death, and damage to property.

## **⚠ DANGER**

Do not store a spare LP-Gas cylinder under or near Travel Q. If the instructions are not followed exactly, a fire causing death or serious injury may occur.

2) Check for gas leaks periodically:  
After a period of nonuse you should perform the following maintenance procedures for your safety.

1. Inspect the burner for correct flame pattern.(Fig.15)  
Clean if necessary, following the procedures outlined in the "Maintenance" section of this manual.
2. Check all gas fittings for leaks.

## **⚠ DANGER**

You should check for gas leaks every time you disconnect and reconnect a gas fitting. All factory-made connections have been thoroughly checked for gas leaks. The burners have been flame tested. As a safety precaution however, you should recheck all fittings for leaks before using your Travel Q. Shipping and handling may have loosened or damaged a gas fitting.

## **⚠ DANGER**

Perform these leak checks even if your grill was dealer or store assembled. You will need soap and water solution and a rag or brush to apply it. To perform leak checks make sure the Burner is in the off position and turn on gas supply.



## ⚠ DANGER

Do not ignite burner while leak checking. Check for leaks by wetting the connections with the soap and water solution and watching for bubbles. If bubbles form, or if a bubble grows, there is a leak. Note: Since some leak test solutions, including soap and water, may be slightly corrosive, all connections should be rinsed with water after checking for leaks.

## Cooking

### Getting started:

Refer to "Operating Instructions" in this owner's manual.

### To light the grill:

Refer to the "Lighting Instructions" in this owner's manual.

### To Preheat the grill:

Light the Travel Q according to the "Lighting Instructions" in this owner's manual. Close the lid and turn the Burner Control Knob to **HI/START** (⚡) position. Preheat the grill for 5-10 minutes (depending on conditions such as air temperature and wind). Once the grill is preheated, set the Burner Control Knob to the low setting.

Note: Wind and weather may require adjustment of the Burner Control Knob to obtain the correct cooking temperature.

If the burner goes out during cooking, open the lid, turn off the burner, and wait 5 minutes before relighting.

### Dripping and grease:

Excess drippings and grease will collect in the Catch Pan located on the underside of the grill. Disposable Travel Q drip pans are available that fit the Catch Pan.

## ⚠ DANGER

Check the Catch Pan and the Base Pan of the grill for grease build-up before each use. Remove excess grease to avoid a fire in the bottom of the grill.

## ⚠ DANGER

Do not move the Travel Q when operating or while the grill is hot.

## Cleaning and Maintenance

## ⚠ DANGER

Turn your gas grill OFF and wait for it to cool before cleaning.

## Cleaning

### Outside surfaces

Use a warm soapy water solution to clean, then rinse with water.

## ⚠ DANGER

Do not use oven cleaner, abrasive cleansers (kitchen cleansers) cleaners that contain citrus products, or abrasive cleaning pads on grill surfaces.

### Cooking grid

Clean with a suitable brass bristle brush. As needed, remove from grill and wash with warm soapy water, then rinse with water.

### Catch Pan

Disposable foil trays are available, or you can line the catch pan with aluminum foil.

To clean the Catch Pan, wash with warm soapy water, then rinse.

### Inside Base Pan

Brush any debris off of burner tubes.

**DO NOT ENLARGE BURNER PORTS (OPENINGS).**

Wash inside of Base Pan with warm soapy water and a water rinse.

### Inside Lid

While lid is warm, wipe inside with paper towel to prevent grease build-up. Built-up grease resembles paint flakes.

**Do not use cleaners that contain acid, mineral spirits or xylene. Rinse well after cleaning.**

## Maintenance

## ⚠ DANGER

- Do not touch or attempt any maintenance on Travel Q for at least one hour after use.
- Make sure all controls are off and propane tank has been turned OFF before doing maintenance.

To enjoy years of outstanding performance from your Travel Q, perform the following maintenance activities on a regular basis:


- Keep exterior surfaces clean.
- Use warm soapy water for cleaning. Never use flammable or abrasive cleaning agents.
- Air Inlet (Fig.27) must be unobstructed. Keep controls, burner and circulating air passages clean. Signs of possible blockage include:
  1. The smell of gas in conjunction with burner flames appearing yellow and lazy.
  2. Grill does not reach temperature.
  3. Grill heats unevenly.
  4. Burner does not ignite.

## ⚠ DANGER

Failure to correct the above mentioned symptoms may result in a fire, which cause serious bodily injury or death, and cause damage to property.



- Spiders and insects can nest in burner venturi section (Fig.27). This condition can damage the Travel Q and render it unsafe for use. Clean burner holes by using a heavy-duty pipe cleaner. Compressed air may help clear away small particles.

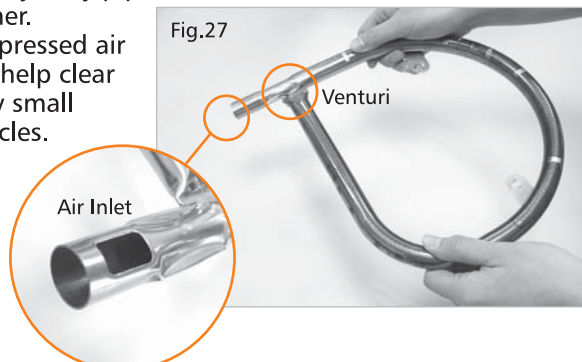


- Carbon deposits may create a fire hazard. Clean burner with warm soapy water if any carbon deposits develop.
- If the Travel Q has been left uncovered and is wet from rain, snow, yard sprinklers, etc., allow to dry (at least 30 minutes prior to use).

**NOTE:** In a salt-air environment (such as near an ocean), corrosion occurs more quickly than normal. Frequently check for corroded areas and repair them promptly.

## Burner Flame Pattern

The Travel Q burner has been factory set for the correct air and gas mixture. The correct flame pattern is shown. (Fig.28)

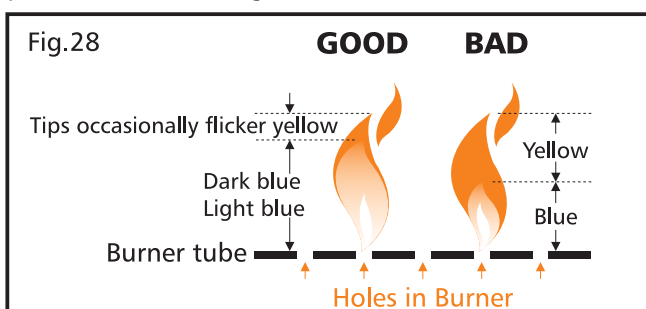

If the flames do not appear to be uniform throughout the burner tube, follow the burner cleaning procedures.

## Burner Tube Cleaning Procedures:

Turn off the gas supply. Remove the burner tube. (See Replacing Burner Tube) Look inside the burner with a flashlight. Clean the inside of burner with a wire (a straightened-out coat hanger will work).(Fig.29)

Check and clean the valve orifice(Fig.31) inside the rear end of Base Pan. Use a steel bristle brush to clean outside of burner. This is to make sure all the burner ports are fully open.



## ⚠ DANGER


Do not enlarge the burner ports when cleaning. Any modification of the appliance may be dangerous.

## Replacing Burner Tube

- 1) Your Travel Q must be OFF and cool.
- 2) Unscrew and remove propane cylinder from the hose assembly.
- 3) Open the lid.
- 4) Remove cooking grid.
- 5) Unscrew and remove the screws and stainless steel washers that hold the burner tube inside the Base Pan (Fig.30).



- 6) Carefully slide the burner tube out from the Base Pan.

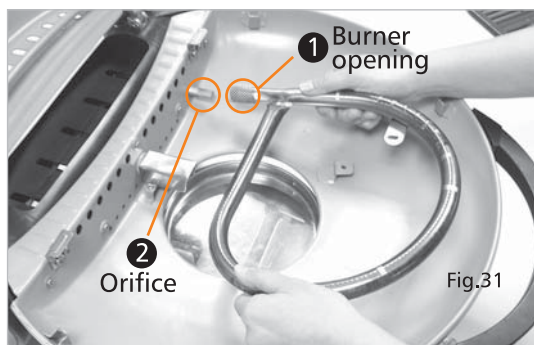


**CAUTION:** The burner opening ① must be positioned properly over the valve orifice ②.(Fig.31)

- 7) To reinstall the burner, reverse procedure 5 through 7.

## Important:

Make sure the Orifice ② (Fig.31) is fitted into the Burner Opening ① (Fig.31) and Igniter port hole A (Fig.32) lines up with the arrow tab on the igniter box B (Fig.32).

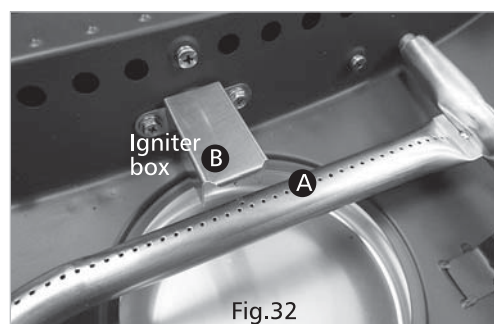

## ⚠ DANGER

Failure to follow the above mentioned procedures, may result in a fire, which cause serious bodily injury or death, and cause damage to property.

### Ignition System Operations

If the ignition system fails to ignite the burner, light the burner with a match. If the burner lights with a match, then check the ignition system.

- Check that both the white and black ignition wires are attached properly.
- Check that the ignition button pushes the igniter (button) down, and returns to the up position. If the ignition system still fails to light, Contact the Customer Service Representative in your area.

### Storage

#### And/ Or Nonuse

- When the Travel Q is not in use, the propane cylinder must be DISCONNECTED and the propane cylinder stored outdoors in a well-ventilated space.

Close the regulator inlet protection cap(Fig. 33 and 34) when your Travel Q is not in use.



Fig.33



Fig.34

- The Travel Q should be checked for gas leaks and any obstructions in the burner tubes before using. (See Sections: "Cleaning and Maintenance")
- The Burner venturi section should also be checked for any obstructions. (See Section: "Cleaning and Maintenance.")
- The Travel Q can be stored easily by stand-up position to save space. (Fig.35)



Fig.35


## Troubleshooting

PROBLEM	CHECK	SOLUTION
Burners do not light, or flame is low in HIGH position.	Is LP cylinder fuel low or empty? Is Igniter wet? Does the burner light with a match?	Replace propane cylinder. If you can light the burner with a match, then check the ignition system.
	Is there air in the gas line?	Burner may take up to one minute to light after a propane cylinder has been connected.
Burners burn with a yellow or orange flame, in conjunction with the smell of gas.	Is there blockage in the burner tube or Venturi?	Clean Burner Tube. (See Section of "Maintenance")
Experiencing of flare-ups:	Is the cooking grid heavily coated with burned-on grease?	Clean thoroughly. (See section "Cleaning") Clean catch Pan.
Burner flame pattern is erratic. Flame is low when burner is on HIGH. Flame does not run the whole length of the burner tube.	Is the burner clean?	Clean burner.(See section "Maintenance")
	Is LP-cylinder Pressure low?	Replace Propane cylinder.
	Is outdoor temperature less than 40°F and LP cylinder less than 1/4 full?	Replace with a full cylinder.
	Is fuel flow restricted?	Check burner and orifices for blockage. Adjust control knob to full ON position.
Burner does not light when igniter button is Pushed.	Is burner tube positioned is too far away from the igniter box?	Check that the burner tube is positioned correctly over the igniter box. (See section "Maintenance- Replacing the burner tube.)
Burner flame does not ignite completely around the burner tube.	Are the burner ports clean and fully open?	Clean burner.(See section "Maintenance".) Use a small paper clip to unclog any dirty ports.
Burner won't stay lit.	Is dust and/or dirt built up around burner?	Clean dirt and/or dust from around burner ports.

If problems cannot be corrected by using these methods, Please contact the Customer Service Representative in your region.

## Parts List

### Explosive View Travel Q 3225

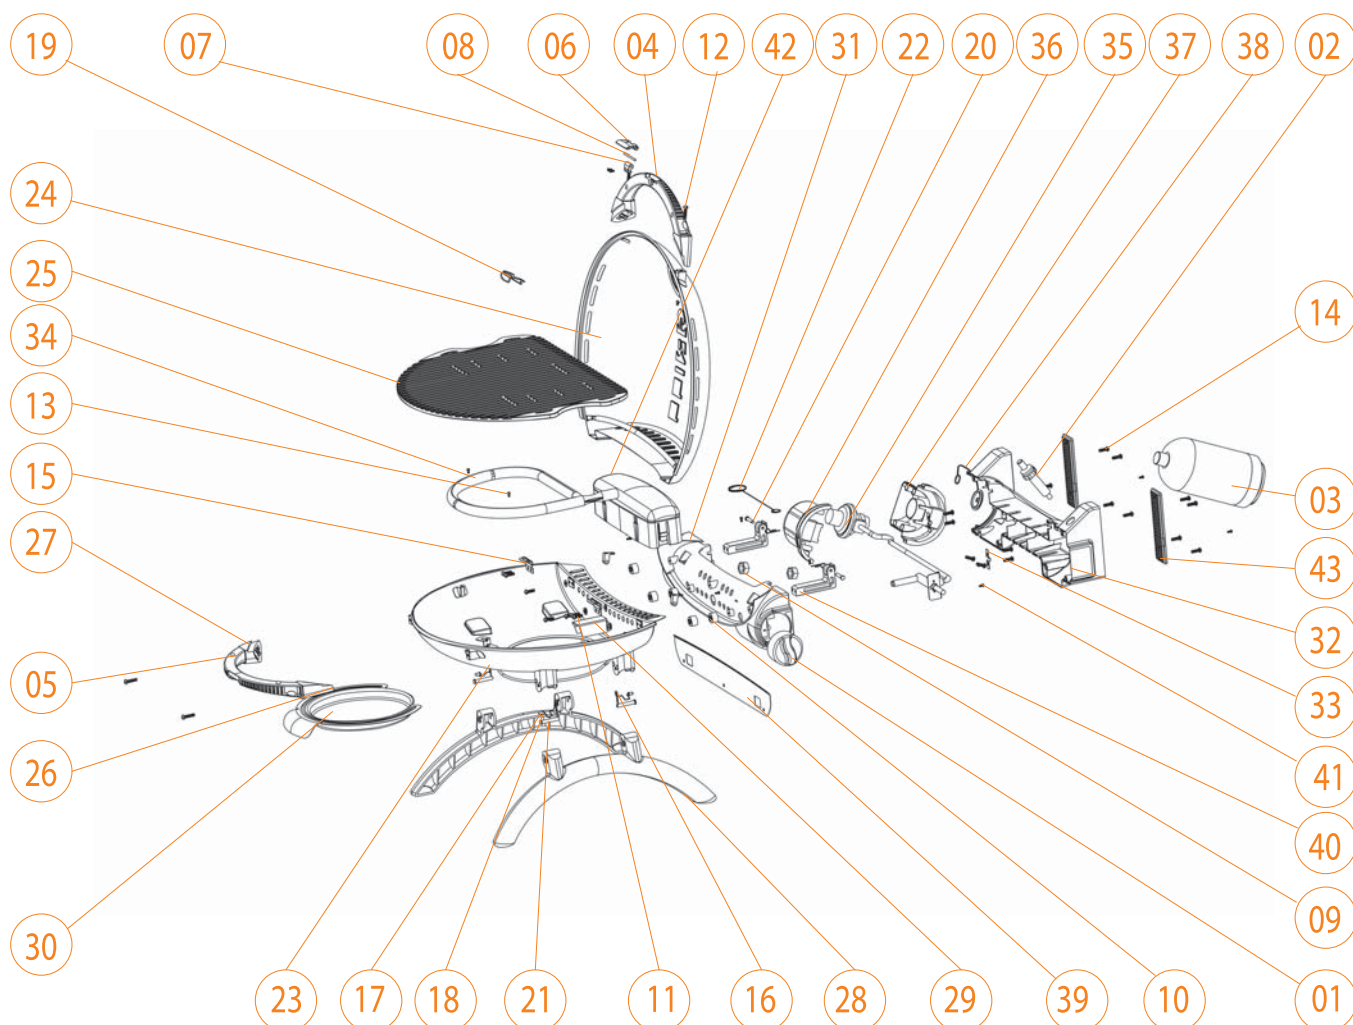

Index No.	Part No.	Description	Qty./Assy.
1	TQ310001-O	Control Knob	1
2	TQ310002	Igniter	1
3	TQ310003	LP Cylinder (Optional)	1
4	TQ310004	Upper Handle	1
5	TQ310005	Lower Handle	1
6	TQ310006-O	Handle Lock (Orange)	1
7	TQ310007	Upper Handle Spacer	1
8	TQ310008	Upper Handle Locking Pin	1
9	TQ310009	Lid Hinge	2
10	TQ310010	Heat Isolator	5
11	TQ310011	M5 x L40mm Philip Screw	5
12	TQ310012	M5 x L30mm Philip Screw	4
13	TQ310013	M5 x L8mm Philip Screw	4
14	TQ310014	M5 x 15 Philip Screw	18
15	TQ310015	Cooking Grate Retainer-Bottom	2
16	TQ310016	R type Spring Lock	6
17	TQ310017	Retractable Leg Lock Pin	4
18	TQ310018	Retractable Leg Lock Pin Spring	4
19	TQ310019	Cooking Grate Retainer-Top	1
20	TQ310020	Locking Pin A	2
21	TQ310021	Locking Pin B	4
22	TQ310022	Match Extension Stick	1

Index No.	Part No.	Description	Qty./Assy.
23	TQ310023-O	Base Pan	1
24	TQ310024-O	Lid	1
25	TQ310025	Cooking Grid	1
26	TQ310026	Handle Heat Isolator(R)	2
27	TQ310027	Handle Heat Isolator(L)	2
28	TQ310028	Retractable Leg	2
29	TQ310029	Igniter Box	1
30	TQ310030	Grease Catch Pan	1
31	TQ310031	Grill End Front Cover	1
32	TQ310032	Grill End Rear Cover (TQ3225)	1
33	TQ310033	Gas Tube Holder	1
34	TQ310034	Burner	1
35	TQ310035	Regulator & Valve Assembly	1
36	TQ310036-O	Cylinder Top Cover	1
37	TQ310037-O	Cylinder Bottom Cover	1
38	TQ310038	LPG Inlet Cap	1
39	TQ310039	Grease Guard	1
40	TQ310040	M5 x L4 Hex Nut	5
41	TQ310041	M3 x 8 Philip Screw	11
42	TQ310042	Storage Case	1
43	TQ310043	Foot Pad	1

## Warranty

### Limited One Year Warranty

Napoleon Appliance Corporation (NAC) warrants that for a period of one years from the date of original retail purchase, this product will be free from defects in material and workmanship.

At its option, Napoleon Appliance Corporation (NAC) will repair or replace this product or any component of the product found to be defective during the warranty period.

Replacement will be made with a new or remanufactured product or component. This is our exclusive warranty. This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance.

### What This Warranty Does Not Cover

This warranty does not cover normal wear of parts, parts that are not genuine parts, or damage resulting from any of the following:

Negligent use or misuse of the product; commercial use of the product; use contrary to the operating instructions; disassembly, repair or alteration by anyone other than or an authorized service center. Further, the warranty does not cover Acts of God, such as fire, flood, hurricanes and tornadoes.

Warranty is void if damage to product results from the use of a part other than a genuine part.

Napoleon Appliance Corporation (NAC) SHALL NOT BE LIABLE FOR DEFECTS THAT ARE CAUSED BY THE USE OF UNAUTHORIZED PARTS OR SERVICE.

Napoleon Appliance Corporation (NAC) SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTY OR CONDITIONS. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE IS LIMITED IN DURATION TO THE DURATION OF THE ABOVE WARRANTY OR CONDITIONS. SOME STATES, PROVINCES, OR JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS OR EXCLUSION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.

The costs of transporting the product to authorized service center for warranty service is the responsibility of the purchaser. Do not mail products with fuel in tanks, or with disposable propane cylinders.

### Warranty Service

Warranty service is available by contacting the Customer Service of Napoleon Appliance Corporation  
Toll Free: 1-866-820 8686

E-mail: [wecare@napoleonproducts.com](mailto:wecare@napoleonproducts.com)



NAPOLEON APPLIANCE CORPORATION.,

214 BAYVIEW DR., BARRIE, ONTARIO, L4N 4Y8, CANADA

PHONE: (705)726-4278 FAX: (705)725-2564

EMAIL: [wecare@napoleonproducts.com](mailto:wecare@napoleonproducts.com) WEB SITE: [www.napoleongrills.com](http://www.napoleongrills.com)