


# MKRY4 ROCK ASSEMBLY

## ! WARNING

ENSURE THE UNIT IS COMPLETELY COOL BEFORE STARTING INSTALLATION

TO AVOID DANGER OF SUFFOCATION KEEP THE PACKAGING BAG AWAY FROM BABIES AND CHILDREN. DO NOT USE IN CRIBS, BED, CARRIAGES OR PLAY PENS. THIS BAG IS NOT A TOY. KNOT BEFORE THROWING AWAY.

YOU WILL NEED:

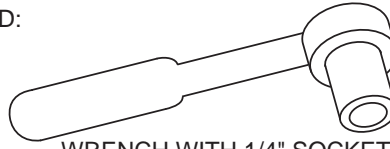

WRENCH WITH 1/4" SOCKET

### INCLUDED IN THIS KIT:


ROCK #	PART #	DESCRIPTION
#1	W135-0555	CENTER BACK ROCK ASSEMBLY
#2	W135-0556	REAR BACK ROCK ASSEMBLY
#3	W135-0557	RIGHT SIDE ROCK ASSEMBLY
#4	W135-0558	LEFT SIDE ROCK ASSEMBLY
#5	W135-0559	MID LEFT ROCK ASSEMBLY
#6	W135-0560	MID RIGHT ROCK ASSEMBLY
#7	W135-0561	FRONT LEFT ROCK ASSEMBLY
#8	W135-0562	FRONT RIGHT ROCK ASSEMBLY



1. Remove the three studs from the rear log support as shown.



2. Remove the two studs from the left side of the burner cover as shown.

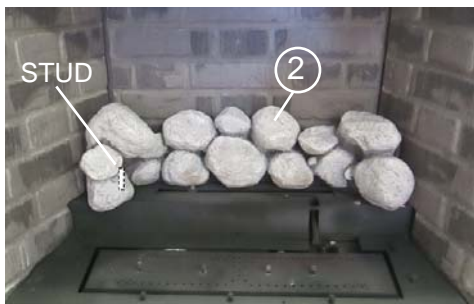

3. Place the #2 rock assembly onto the stud located on the rear log support as shown.



4. Place the #1 rock assembly in front of the #2 rock assembly on the edge of the rear log support, make sure to tuck the #1 rock assembly slightly under the #2 rock assembly as shown.

Quality System Certified To

**ISO**  
9001-2008


W415-1231/ A / 09.24.13




5. Place the # 3 rock assembly on the two corresponding studs located on the right of the burner cover as shown.




6. Place the # 4 rock assembly on the left side of the burner cover in front of the # 1 rock assembly. **NOTE: Do not cover the burner ports.**

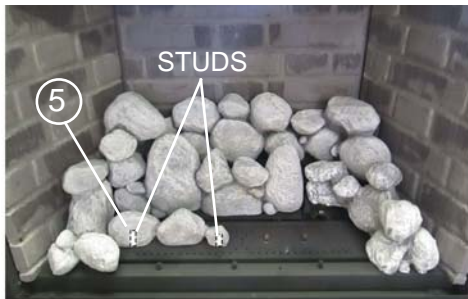


7. Place the # 5 rock assembly on the two corresponding studs located on the left side of the front burner in front of the # 1 rock assembly as shown.

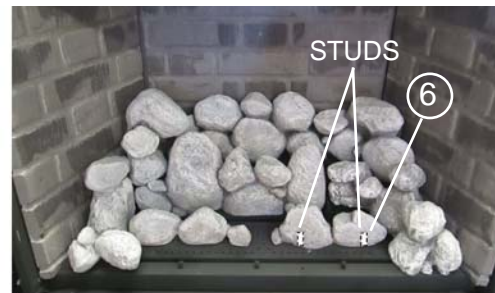

8. Place the # 6 rock assembly on the two corresponding studs located on the right side of the front burner as shown.

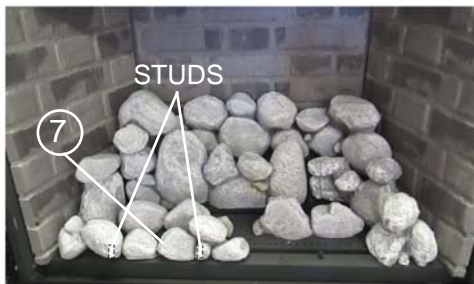

9. Place the # 7 rock assembly on the two corresponding studs in front of the #5 rock assembly as shown.

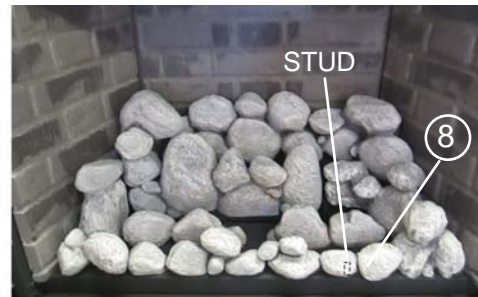

10. Place the # 8 rock assembly on the corresponding stud in front of the # 6 rock assembly as shown. **NOTE: Do not cover the burner ports.**


## ASSEMBLAGE DE ROCHES MKRY4

### ! AVERTISSEMENT

ASSUREZ-VOUS QUE L'APPAREIL EST COMPLÈTEMENT REFROIDI AVANT DE COMMENCER L'INSTALLATION.

AFIN D'ÉVITER LES RISQUES DE SUFFOCATION, GARDEZ LE SAC D'EMBALLAGE LOIN DES BÉBÉS ET DES JEUNES ENFANTS. NE LE LAISSEZ PAS TRAÎNER DANS LES BERCEAUX, LES LITS, LES POUSETTES OU LES PARCS DE JEU. CE SAC N'EST PAS UN JOUET. NOUEZ-LE AVANT DE LE JETER.


VOUS AUREZ BESIION DE:

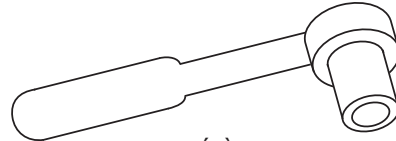

1/4" CLÉ À DOUILLE

#### FOURNI DANS L'ENSEMBLE:


# DE ROCHE	# DE PIÈCE	DESCRIPTION
#1	W135-0555	L'ASSEMBLAGE DE ROCHE DU CENTRE EN ARRIÈRE
#2	W135-0556	L'ASSEMBLAGE DE ROCHE DE L'ARRIÈRE
#3	W135-0557	L'ASSEMBLAGE DE ROCHE DU CÔTÉ DROITE
#4	W135-0558	L'ASSEMBLAGE DE ROCHE DU CÔTÉ GAUCHE
#5	W135-0559	L'ASSEMBLAGE DE ROCHE DU CÔTÉ GAUCHE AU MILIEU
#6	W135-0560	L'ASSEMBLAGE DE ROCHE DU CÔTÉ DROITE AU MILIEU
#7	W135-0561	L'ASSEMBLAGE DE ROCHE DU CÔTÉ GAUCHE EN AVANT
#8	W135-0562	L'ASSEMBLAGE DE ROCHE DU CÔTÉ DROITE EN AVANT

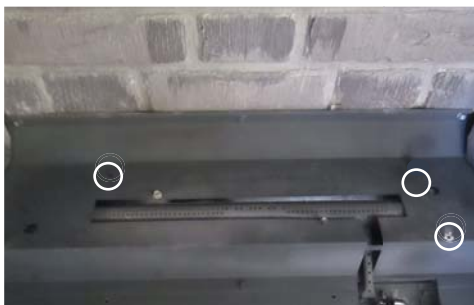

1. Enlevez les trois goujons du support de bûches comme illustrée.



2. Enlevez les deux goujons de la couvercle du brûleur aux côté gauche comme illustrée.

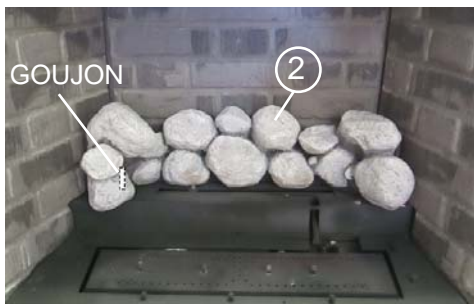

3. Placez l'assemblage de roche #2 sur le goujon du support de bûches comme illustrée.



4. Placez l'assemblage de roche #1 en avant de l'assemblage de roche #2 sur le bord du support de bûches., assurez-vous que l'assemblage de roche #1 se trouve sous l'assemblage de roche #2, comme illustrée.

Quality System Certified To

**ISO**  
9001-2008

W415-1231 / 11.13.13






5. Placez l'assemblage de roche #3 sur les deux goujons correspondante à la côté droite du couvercle du brûleur, comme illustrée.




6. Placez l'assemblage de roche #4 à la côté gauche du couvercle du brûleur en avant de l'assemblage de roche #1. **NOTE: Ne pas couvrir les injecteurs du brûleur.**

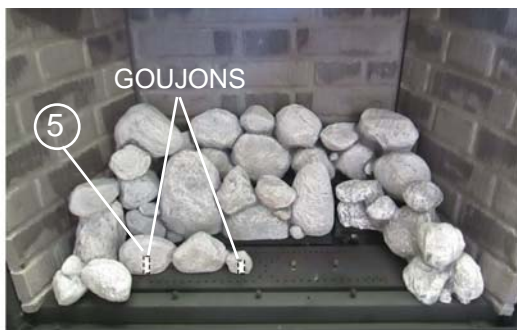

7. Placez l'assemblage de roche #5 sur les deux goujons correspondante sur la côté gauche en avant de l'assemblage de roche #1, comme illustrée.



8. Placez l'assemblage de roche #6 sur les deux goujons correspondante à la côté droite, comme illustrée.

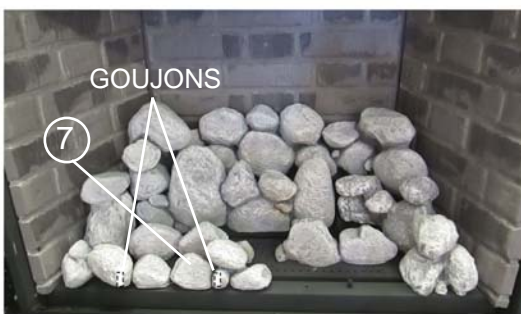

9. Placez l'assemblage de roche #7 sur les deux goujons correspondante en avant de l'assemblage de roche #5, comme illustrée.



10. Placez l'assemblage de roche #8 sur la goujon correspondante en avant de l'assemblage de roche #6 comme illustrée. **NOTE: Ne pas couvrir les injecteurs du brûleur.**