6.4 LOG PLACEMENT (HD4ST AND HD4P ONLY)

⚠ WARNING

FAILURE TO POSITION THE LOGS IN ACCORDANCE WITH THESE DIAGRAMS OR FAILURE TO USE ONLY LOGS SPECIFICALLY APPROVED WITH THIS APPLIANCE MAY RESULT IN PROPERTY DAMAGE OR PERSONAL INJURY.

LOGS MUST BE PLACED IN THEIR EXACT LOCATION IN THE APPLIANCE. DO NOT MODIFY THE PROPER LOG POSITIONS, SINCE APPLIANCE MAY NOT FUNCTION PROPERLY AND DELAYED IGNITION MAY OCCUR.

THE LOGS ARE FRAGILE AND SHOULD BE HANDLED WITH CARE.

76.1A

NOTE: The individual logs can be easily identified by the numbers cast on the underside of each log.

Phazer™ logs and glowing embers exclusive to Wolf Steel Ltd., provide a unique and realistic glowing effect that is different in every installation. During the initial use of the appliance, log colours may vary. During the initial use of the appliance the colours will become more uniform as colour pigments burn in during the heat activated curing process.

NOTE: The pilot is located on the right end in these instructions.

1. Remove the doors, refer to the "DOOR REMOVAL / INSTALLATION section for removal instructions.

2. Place the #1 log onto the one pin located on the corner of the burner, on the left side, and the second pin located on the left end hearth pad. Place one pin into the log, as shown in Figure 1.

3. Place the #2 log onto the pin located in the #1 log, it should rest in the middle of the right side hearth pads as shown in Figure 2. Place one pin into the middle of the #2 log, as shown in Figure 2.

4. Place the #3 log onto the pin located in the #2 log and let it rest on the right side hearth pads, as shown in Figure 3 and in the right side view below. Place one pin into the #2 log, as shown in Figure 3.

5. Place the #4 log onto the pin located in log #2 and let it rest on the right end hearth pads, as shown in Figure 4 and in the left side view. Place one pin into the right side hearth pad, as shown in Figure 4.

6. Place the #5 log onto the pin located in the right side hearth pad and let it rest on the burner, as shown in Figure 5. **NOTE: Ensure log #5 does not cover any burner ports.**

7. Place the #6 log onto the pin located on the corner of the burner, on the left side, then place one pin into middle of the log, as shown in Figure 6. **NOTE: Ensure log #6 does not cover any burner ports.**

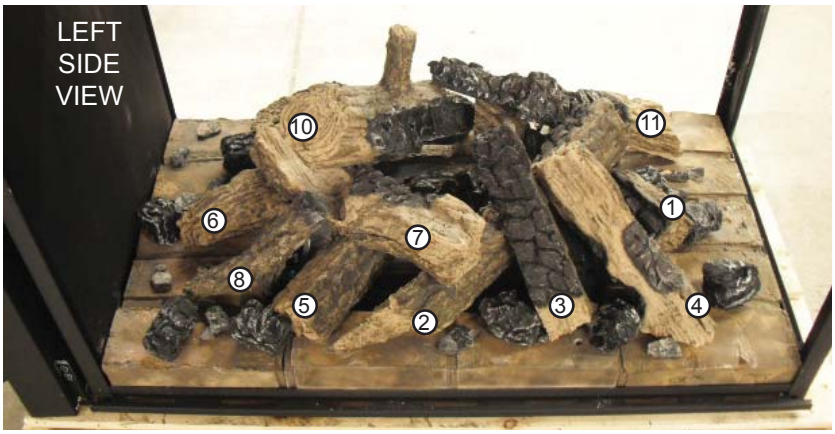

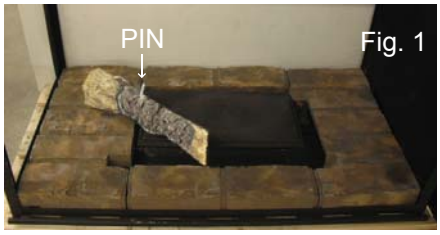

Fig. 1

Fig. 2

Fig. 3

Fig. 4

Fig. 5

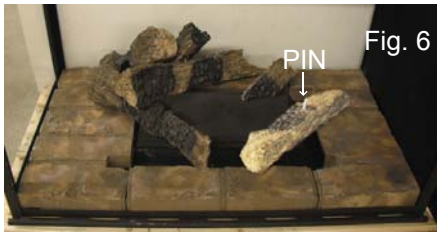

Fig. 6

8. Place the #7 log onto the pin located in log #6 and onto the pin in the #5 log, as shown in Figure 7.

9. Place the #8 log on the hearth pad and let it rest against the notch in the side of the #7 log, as shown in Figure 8. **HINT: The best view of the #8 log is shown in the left side view below.**

10. Place the #9 log onto the pin located in the #6 log and let it rest on the right side, corner hearth pad and then place one pin into the #6 log, as shown in Figure 9.

11. Place the #10 log onto the pin located in the #7 log and let is rest in the middle of the left side hearth pads, as shown in Figure 10. Place one pin into the #1 log, as shown in Figure 10.

12. Place the #11 log onto the pin located in the #1 log and let is rest on the left end hearth pads, as shown in Figure 11.

13. Place the #12 charcoal lump onto the two pins located in the center of the burner, as shown in Figure 12.

14. Tear the ember material into small thin pieces and spread evenly on top of the burner. Ember material will only glow when exposed to direct flame.

15. Sprinkle the charcoal embers around the hearth then place the charcoal lumps on top of the charcoal embers, as shown below.

<u>NOTE:</u> Do not cover the pilot or burner ports with media or embers. Do not overfill.

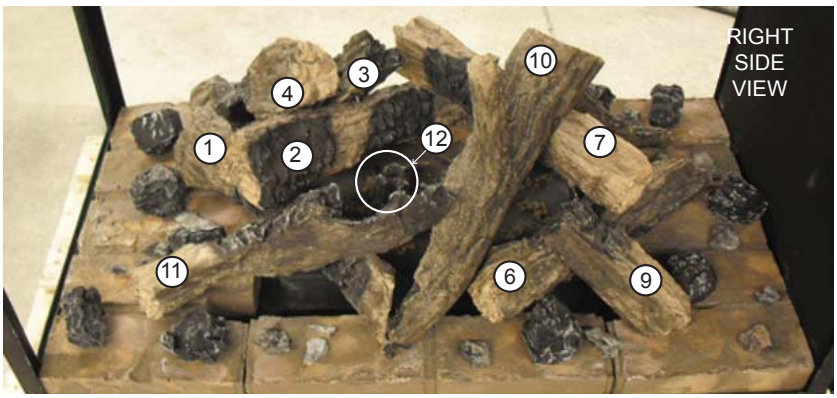

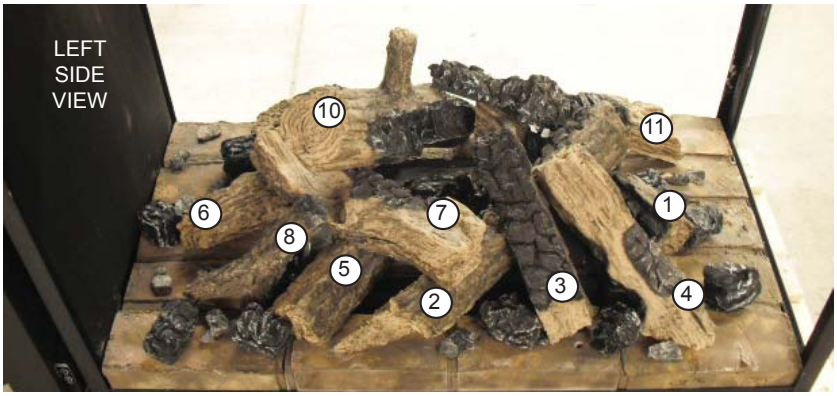

Fig. 7

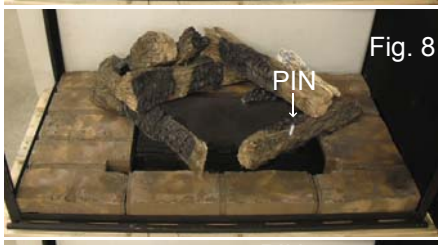

Fig. 8

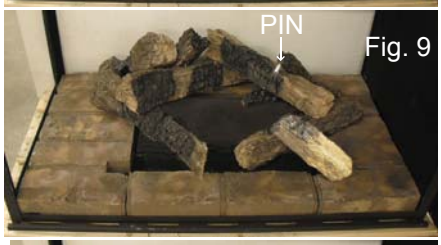

Fig. 9

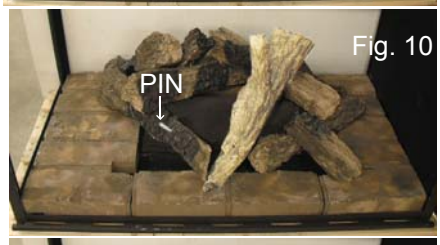

Fig. 10

Fig. 11

Fig. 12

6.4 DISPOSITION DES BÛCHES (HD4ST ET HD4P SEULEMENT)

⚠ AVERTISSEMENT

OMETTRE DE POSITIONNER LES BÛCHES CONFORMÉMENT AUX SCHÉMAS OU OMETTRE D'UTILISER UNIQUEMENT DES BÛCHES SPÉCIFIQUEMENT APPROUVÉES POUR CET APPAREIL PEUT CAUSER DES DOMMAGES MATÉRIELS OU DES BLESSURES CORPORELLES.

LES BÛCHES DOIVENT ÊTRE PLACÉES CORRECTEMENT À L'INTÉRIEUR DE L'APPAREIL. NE CHANGEZ PAS LA POSITION DES BÛCHES CAR L'APPAREIL RISQUE DE NE PAS FONCTIONNER ADÉQUATEMENT ET UN RETARD D'ALLUMAGE RISQUE DE SE PRODUIRE.

LES BÛCHES SONT FRAGILES ET DEVRAIENT ÊTRE MANIPULÉES AVEC SOIN.

76.1A

FR

NOTE: Chacune des bûches est facilement identifiable par son numéro moulé en dessous.

Les bûches PHAZER™, exclusives aux appareils NAPOLÉON®, créent un effet incandescent réaliste et unique qui est différent dans chaque installation. Lors de l'utilisation initiale de l'appareil, les couleurs deviendront plus uniformes à mesure que leurs pigments seront absorbés pendant le procédé de cuisson.

NOTE: Le pilote est située à la côté droite dans ces instructions.

1. Enlèver les portes, voir la section «INSTALLATION/ENLÈVEMENT DE LA PORTE» pour les instructions d'enlèvement.

2. Placer bûche #1 sur l'épingle aux coin du bruleur et l'épingle aux base de protection à la côté gauche. Placer une épingle au centre de la bûche #1, comme illustrée en Figure 1.

3. Placer bûche #2 sur l'épingle en bûche #1, il devrait se reposer sur le milieu de la base de protection à la côté droite, comme illustrée en Figure 2. Placer une épingle au centre de la bûche #2, comme illustrée en Figure 2.

4. Placer bûche #3 sur l'épingle en bûche #2, il devrait se reposer sur la base de protection à la côté droite, comme illustrée en Figure 3. Placer une épingle dans bûche #2, comme illustrée en Figure 2.

5. Placer bûche #4 sur l'épingle en bûche #2, il devrait se reposer sur la base de protection à la côté droite, comme illustrée en Figure 4 et au vue du côté gauche ci-dessous.

6. Placer bûche #5 sur l'épingle de la base de protection, à la côté droite, il devrait se reposer sur la bruleur, comme illustrée en Figure 5. **NOTE: Garantir que bûche #5 ne couvre pas les orifices du brûleur.**

7. Placer bûche #6 sur l'épingle à la coin gauche du bruleur, puis placer une épingle au centre de la bûche, comme illustrée en Figure 6. **NOTE: Garantir que bûche #6 ne couvre pas les orifices du brûleur.**

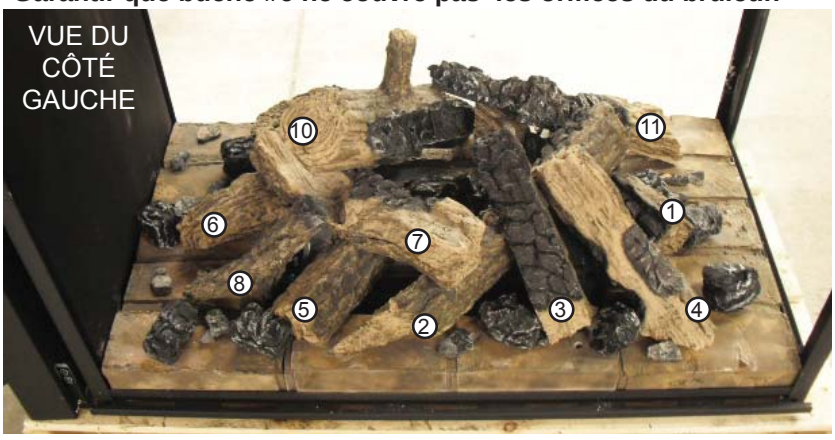

8. Placer bûche #7 sur les épingles en bûche #5 et bûche #6, comme illustrée en Figure 7.

9. Placer bûche #8 sur la base de protection,il devrait se reposer sur la retrait du bûche #6, comme illustrée en Figure 8. **<u>HINT:</u> La meilleure vue du bûche #8 est montrée dans la vue gauche ci-dessous.**

10. Placer bûche #9 sur l'épingle en bûche #7, il devrait se reposer sur la base de protection à la côté droite. Placer une épingle dans la bûche #6, comme illustrée en Figure 9.

11. Placer bûche #10 sur l'épingle en bûche #7, il devrait se reposer sur la centre de la base de protection à la côté gauche, comme illustrée en Figure 10. Placer une épingle dans la bûche #1, comme illustrée en Figure 10.

12. Placer bûche #11 sur l'épingle en bûche #1, il devrait se reposer sur la base de protection à la côté gauche, comme illustrée en Figure 11.

13. Placer la morceau de charbon #12 sur les deux épingles au centre du bruleur, comme illustrée en Figure 12.

14. Déchirez les braises incandescentes en petits morceaux placez-les sur le brûleur. Les braises seront incandescentes seulement lorsqu'elles sont exposées à une flamme directe.

15. Éparpillez les braises de charbon sur les bases de protection et puis placer les morceaux de charbon, comme illustrée ci-dessous.

<u>NOTE:</u> Ne couvre pas les orifices du brûleur ou le pilote avec les morceaux ou les braises de charbon. Ne remplir pas trop.

Fig. 7

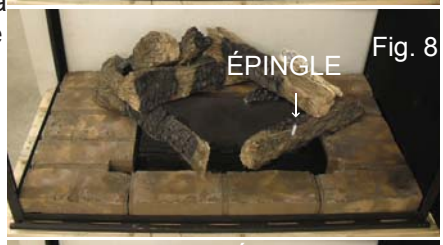

Fig. 8

Fig. 9

Fig. 10

Fig. 11
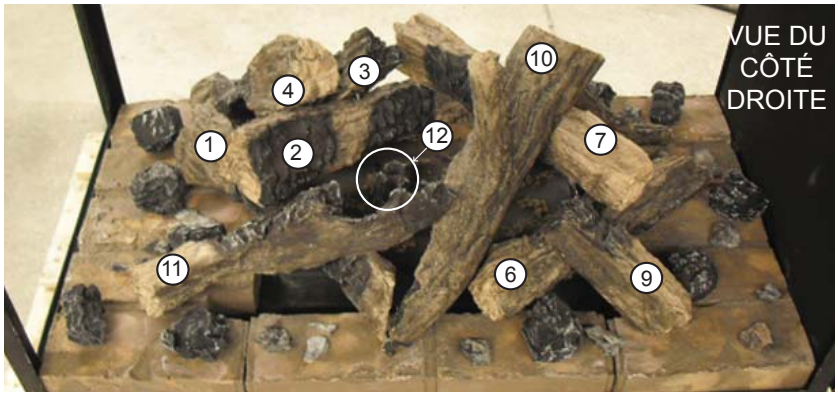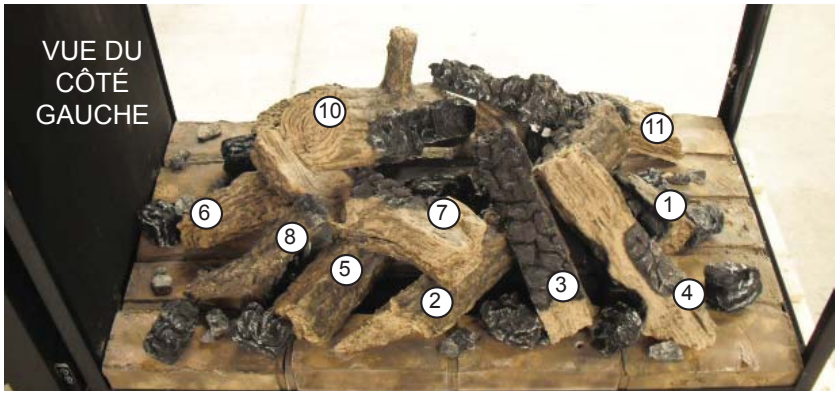
Fig. 12